

Mobility Conversions Ltd

Accelerator Ring from Behind Steering Wheel

And

Radial Brake Lever



The Accelerator ring is situated under the original wheel of the car, allowing a flowing, natural drive and excellent progression on acceleration. Its particular position allows you to keep the airbag, and accessibility to the various car controls, with out obstructing or restricting other drivers. Gently pull the ring up towards the steering wheel to accelerate.

The Brake lever works through a vertical push offering some advantages: it's soft (all the strength used by the hand is multiplied and transmitted to the pedal) and the braking is very quick. The brake stroke is small and you don't have to take the hand completely off the wheel to use the brake lever. The horn and the handbrake ratchet are included in the above handle, so that they can be easily operated by the same hand using the brake lever.

The two products can be fitted separately.

- New vehicle may be eligible to Vat Exemption when driving Adaptations fitted.

For further details please contact us at:

Mobility Conversions Ltd, Langley Road South, Salford, Manchester, M6 6SY

Tel: 0161-745-9737 or Fax: 0161-743-0190

Email: info@mobilityconversions.co.uk or Web site: www.mobilityconversions.co.uk